


## Farmington Street Berm - REV-1

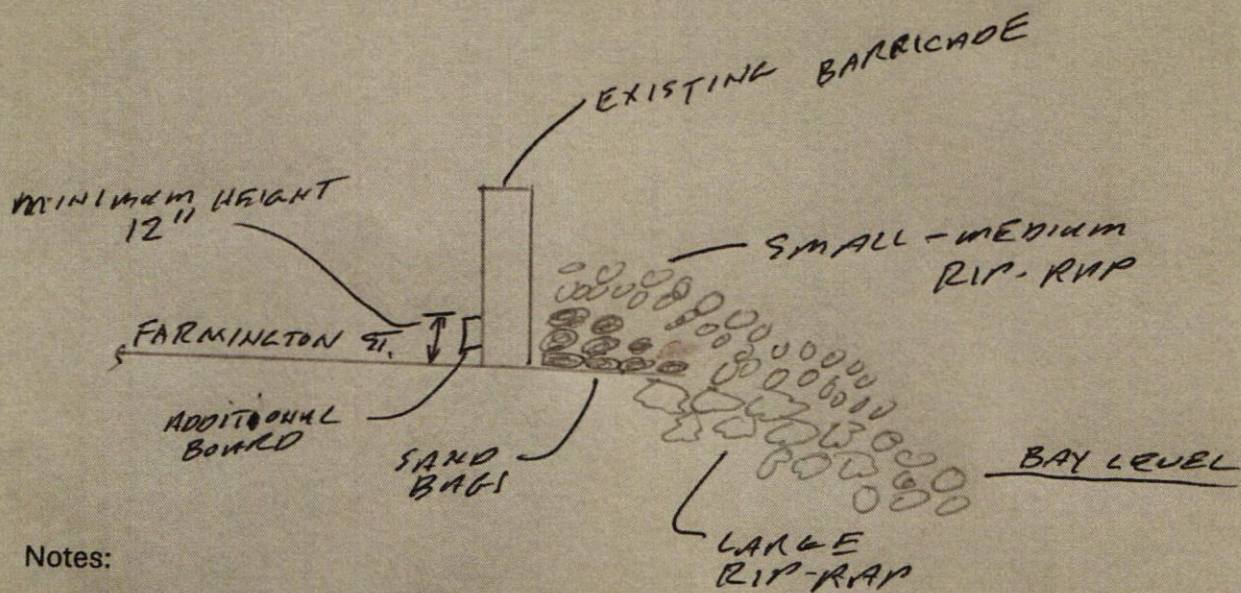

### Notes:

- Fasten a 2" x 8" treated lumber board to the bottom of the existing barricade posts
- Add large rip-rap on the west side of the existing barricade so that the rip-rap is at street level uniformly for four feet on west side of the barricade.
- Add medium size rip-rap over the large rip-rap to fill in any gaps for four feet on the west side of the barricade.
- Cover the rip-rap with gravel for four feet on the west side of the barricade.
- Cover the entire area under the planned berm location with 1/2-inch of sand.
- Use 14" x 26" synthetic sand bags.